



Aspen HYSYS

*Getting Started in Aspen HYSYS:
A Quick Tutorial*

Version Number: V8.3

August 2013

Copyright (c) 1981-2013 by Aspen Technology, Inc. All rights reserved.

Aspen HYSYS and the aspen leaf logo are trademarks or registered trademarks of Aspen Technology, Inc., Burlington, MA. All other brand and product names are trademarks or registered trademarks of their respective companies. This manual is intended as a guide to using AspenTech's software. This documentation contains AspenTech proprietary and confidential information and may not be disclosed, used, or copied without the prior consent of AspenTech or as set forth in the applicable license agreement. Users are solely responsible for the proper use of the software and the application of the results obtained.

Although AspenTech has tested the software and reviewed the documentation, the sole warranty for the software may be found in the applicable license agreement between AspenTech and the user. ASPENTECH MAKES NO WARRANTY OR REPRESENTATION, EITHER EXPRESSED OR IMPLIED, WITH RESPECT TO THIS DOCUMENTATION, ITS QUALITY, PERFORMANCE, MERCHANTABILITY, OR FITNESS FOR A PARTICULAR PURPOSE.

This document is intended as a guide to using AspenTech's software. This documentation contains AspenTech proprietary and confidential information and may not be disclosed, used, or copied without the prior consent of AspenTech or as set forth in the applicable license.

Aspen Technology, Inc.
200 Wheeler Road
Burlington, MA 01803-5501
USA

Phone: (1) (781) 221-6400
Toll Free: (1) (888) 996-7100
Web site: <http://www.aspentech.com>

Contents

CONTENTS	I
1. INTRODUCTION	1
1.1 ABOUT THIS CASE	2
1.1. NEW CASE AND SESSION PREFERENCES	2
1.2. CREATE A NEW UNIT SET	3
1.3. ADD COMPONENTS TO A COMPONENT LIST	4
Tip: Multiple Component Lists	5
Tip: Viewing or Editing Component Properties.....	5
1.4. SELECTING THE PROPERTY METHODS TO CREATE A FLUID PACKAGE	5
Tip: Multiple Fluid Packages	6
Definitions for review:	6
1.4.1. <i>Save the Case</i>	7
2. ENTERING THE SIMULATION ENVIRONMENT	8
2.1. INSTALLING THE FEED STREAMS	8
2.1.1. <i>Enter Feed Conditions</i>	8
2.1.2. <i>Define the Stream Composition</i>	9
2.2. CREATE A SECOND FEED STREAM	11
2.3. ANALYSIS TOOLS: PHASE DIAGRAM	11
2.4. INSTALLING THE MIXER	12
2.5. INSTALLING THE INLET SEPARATOR	14
2.6. USING WORKBOOK FEATURES	15
2.6.1. <i>Tip: Access Operation Controls from the Workbook</i>	15
2.6.2. <i>Add a Variable-Specific Tab to the Workbook</i>	15
2.7. INSTALLING THE HEAT EXCHANGER.....	16
2.7.1. <i>Tip: Arranging the PFD</i>	17
2.7.2. <i>Tip: PFD Color Codes and Calculation Status</i>	18
2.8. INSTALLING THE CHILLER	19
2.8.1. <i>Connecting the Chiller</i>	20
2.8.2. <i>Graphically Add Outlet and Energy Streams</i>	21
Tip: To break an incorrect connection:	21
2.9. DEFINING THE MATERIAL AND ENERGY STREAMS	21
2.10. INSTALLING THE LOW-TEMPERATURE SEPARATOR (LTS).....	22
2.10.1. <i>Adding and Connecting the LTS</i>	22
2.10.2. <i>Adding a Heat Exchanger Specification</i>	23
2.10.3. <i>Review Results</i>	24
2.11. CHECKING THE SALES GAS DEW POINT.....	24
2.11.1. <i>Install the Balance Operation</i>	25

2.12. INSTALL THE SECOND MIXER.....	25
2.13. INSTALL THE DEPROPANIZER COLUMN.....	26
2.13.1. <i>Define the Column Stages</i>	26
2.13.2. <i>Adding a Column Specification</i>	28
2.13.3. <i>Running the Column</i>	29
Tip: Accessing the Column Sub-flowsheet	30
2.14. VIEWING AND ANALYZING RESULTS	30
2.15. USING DATA TABLES	30
2.15.1. <i>Creating the Data Table</i>	30
2.16. MODIFY THE COLDGAS STREAM; OBSERVE RESULTS.....	31
2.17. CASE COMPLETE	32

1. Introduction

This tutorial guides you through the complete construction of a very basic Aspen HYSYS steady state simulation. To see the completed exercise, you can open the file *Sweet Gas Refrigeration Plant.hsc* in the Aspen HYSYS\Samples folder. (Tip: Click Examples from the Get Started ribbon to open the folder.) Several other completed cases are included with your Aspen HYSYS package.

This simulation will show you how to:

1. Set up the units of measurement.
2. Select the chemical components from the component library.
3. Choose a property package (a set of calculation methods).
4. Enter the Simulation environment.
5. Add and define the feed streams.
6. Add and define the unit operations leading to the column.
7. Add and define the column operation.
8. Set up monitoring and reporting operations to record results.

Once the results for the simulation are obtained, you will have a good understanding of the basic processes used to build a HYSYS simulation case.


Note: *Due to regular updates, changes, and improvements in Aspen HYSYS releases, the calculation results in your simulation may vary slightly from those in the tutorial. If you are not getting the same results as those in the tutorial, please proceed anyway. It is more important that you get the end-to-end overview of the basic HYSYS setup and simulation process than to match the results of this particular case.*

1.1 About This Case

The case models a sweet gas refrigeration plant with an inlet separator, a gas/gas heat exchanger, a chiller, a low-temperature separator and a de-propanizer column.

In the simulation, a natural gas stream containing **N₂**, **CO₂**, and **C₁ through n-C₄** is processed in a refrigeration system to remove the heavier hydrocarbons. The lean, dry gas produced will meet a pipeline hydrocarbon dew point specification. The liquids removed from the rich gas are processed in a depropanizer column, yielding a liquid product with a specified propane content.

The flowsheet for this process appears below.

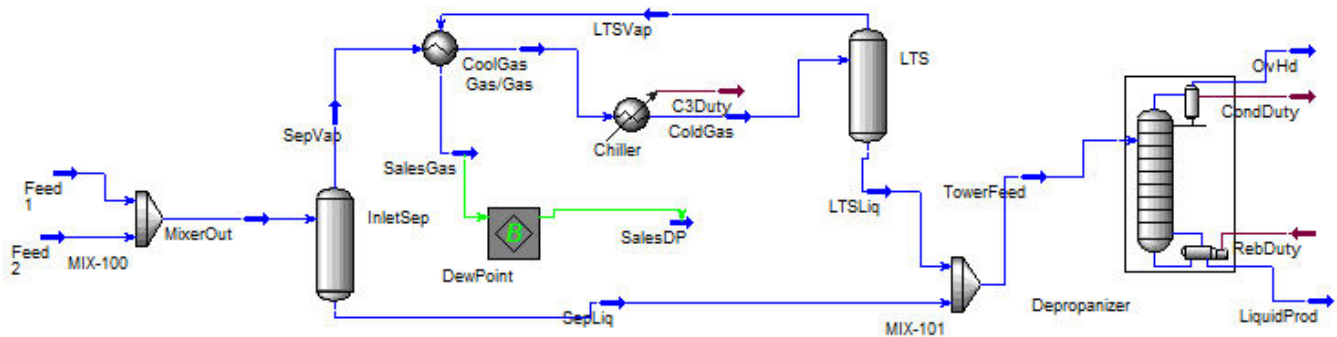

First, two feeds are combined in a mixer. The mixer-combined feed stream then enters an inlet separator, which removes the free liquids. Overhead gas from the separator is fed to the gas/gas exchanger, where it is pre-cooled by refrigerated gas. The cooled gas is then fed to the chiller, where it is further cooled by exchange with evaporating propane (represented by the C3Duty stream).

In the chiller, (modelled using a cooler operation) enough heavier hydrocarbons condense so that the eventual sales gas meets a pipeline dew point specification. The cold stream is then separated in a low-temperature separator (LTS).

The dry, cold gas from the LTS is fed back to the gas/gas exchanger and then to sales, while the condensed liquids from the LTS are mixed with free liquids from the inlet separator. These liquids are processed in a depropanizer column to produce a low-propane-content bottoms product.

1.1. New Case and Session Preferences

Now you will start a new case file for the tutorial simulation you will build. Close any open cases, and from the File menu select New > Case.

A new HYSYS case starts in the Properties Environment, because you will need to define the components and calculation methods involved before you place any unit operations on a flowsheet. You'll see **Properties** selected in the Navigation pane, on the bottom left of the screen. The navigation tree for the properties environment shows two items, Component Lists and Fluid Packages, with red icons, meaning that they are not yet

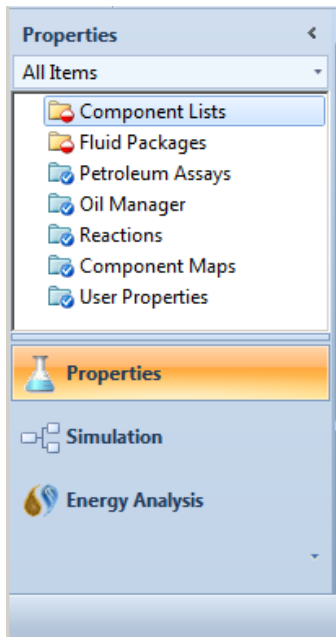


Figure 1 – Undefined Component Lists and Fluid Packages

defined. These two have the red flag because they are the minimum required setups needed to enter the simulation environment and begin a simulation. The other selections, Oil Manager, Reactions and the rest, are optional, which is why they are marked with the OK status even though they are undefined.

You will define the component list and fluid package for the new case in sections 1.3 and 1.4 respectively. First, however, you will define a units of measure set.

1.2. Create a New Unit Set

HYSYS has several different default unit sets that cannot be edited. If you want to edit the units when starting a case, you can clone one of the sets and assign the cloned set to the simulation. For this example, you will make a new unit set based on the HYSYS *Field* set, which you will then customize.

To create the new unit set,

1. Click File > Options. (Options is a button on the lower right pane of the File window.)
2. In the Simulation Options property view, click Units of Measure.
3. In the Available Unit Sets group, select the Field set and click Copy. A new unit set named NewUser is created.
4. In the Unit Set Name field, enter a custom name for the new unit set, e.g. GasProcess, and press Enter. You can now change the units for any variable associated with this new unit set. For this example, in the Display Units group (top of the page) scroll down the list until you find Molar Flow. The default setting is lbmole/hr. A more appropriate unit for the Flow in this case is MMSCFD.
5. Open the drop-down list in the cell beside the Molar Flow cell. Scroll down through the list and select MMSCFD. Your new unit set is now defined.
6. Click OK to close the property view.

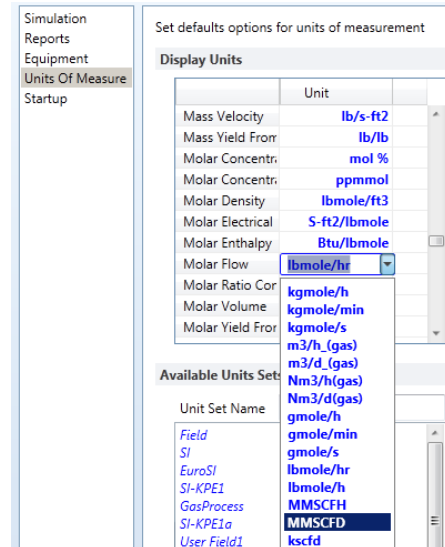


Figure 2 – Making a Custom Units Set

Selections take effect as soon as you make them in the dialog box. The current state of preferences becomes the state for all cases subsequently opened or created.

Note: The default settings are stored in a file called HYSYS.prf. You can optionally save changes in a new Preference file by clicking the Save Preference Set button. HYSYS prompts you to provide a name for the new Preference file, which you can later load into any simulation case by clicking the Load Preference Set button.

1.3. Add Components to a Component List

Now you will add the component compounds for the gas processor to a component list.

When a new case starts, HYSYS is open to the Properties Environment - Component List window by default. If it isn't open to the Component List window, click Component Lists in the navigation pane to bring it up.

Click the down arrow next to the Add button, and select HYSYS from the drop down list. (Here, you are choosing between the HYSYS component libraries and the Aspen Properties component libraries.) A new window appears which includes a list of components and an Add > button. This is the editing window for the new component list. Also, in the navigation pane, a new line is created for the new component list – "Component List 1." It shows the red icon since it is not yet complete.

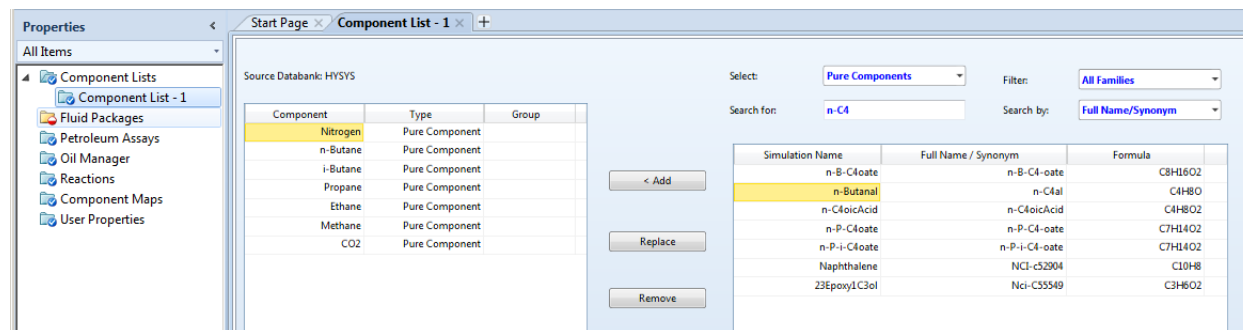


Figure 3 – Add Components to the Components List

For this tutorial, you will add the following components: N2, CO2, C1, C2, C3, i-C4 and n-C4.

First, you will add nitrogen.

1. Set the *Search by* box to *Full Name/Synonym*.
2. In the Search For field, type *Nitrogen*.

HYSYS filters as you type and displays only components that match your input.

3. With Nitrogen selected, click the Add button to add it to the current composition list. You can also use the Filter options to display only those components belonging to certain families.
4. Now add the rest of the components needed for the case: CO2, and C1 through n-C4.
5. Add the CO2 component to the component list.

- To add the remaining components C1 through n-C4 using the filter, set the Filter to *Hydrocarbons*.


You can drag the cursor down the name list and multiple-select C1 through n-C4. (You can also unselect using CTRL in the usual way.)

- Click Add. These components are added to the list. Notice that because “Component List – 1” in the navigation pane now contains components, it is checked as complete.

Tip: Multiple Component Lists

A case needs at least one component list, but as a simulation grows more complex you may find it useful to create more component lists dedicated to different component types. For example, a stream that carries only a coolant such as water or a refrigerant will solve faster if it sources a component list with only the coolant in it, rather than a list with the coolant and every other component in the simulation. You may also want to consider choosing different property packages for different component lists, as each property package is most accurate for specific components.

Tip: Viewing or Editing Component Properties

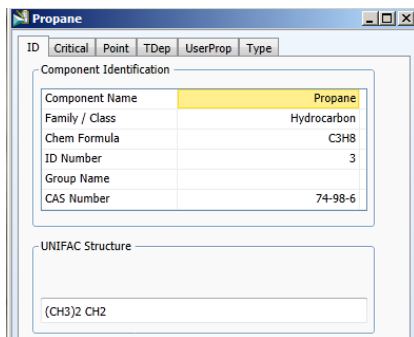

To view the properties of a component, double click it in the list. HYSYS opens the property view for the component you selected. The Component property view only allows you to view the pure component information.

You cannot modify any parameters for a library component, however, HYSYS allows you to clone a library component as a Hypothetical component, which you can then modify as desired.

Figure 4 – Viewing component info.

1.4. Selecting the Property Methods to Create a Fluid Package

Now that you have defined the component list you can complete the setup by associating it with a *property package*. A property package includes the equations used to model thermodynamic behavior of pure compounds and mixtures. There are different property packages available in HYSYS, as different equations are better suited to accurately predict the behavior of different systems. The most commonly used are the Equations of State property packages, specifically the Peng-Robinson package.

When you join a component list with a property package, you create a *fluid package*. It is the fluid package that carries all of the information needed to start defining the simulation on the flowsheet.

To create the fluid package:

1. Click Fluid Packages on the navigation pane. In the Fluid Packages window, click the Add drop down list and select HYSYS. (The HYSYS property package library). The new fluid package definition is added to the navigation pane with the default name of Basis-1.
2. From the Property Package Selection field, select Peng-Robinson. The optional setups available for the Peng-Rob method appear to the right of the list¹.
3. Since there is only one component list defined for this simulation, it appears by default as selected in the Component List Selection pull down. (If you had more than one Components list you'd use this field to match the comp list with a property package.) When a property package and a component list are selected, the fluid package is defined.

The red icon on the "Basis-1" list in the navigation pane turns to a blue check, indicating the fluid package is ready.

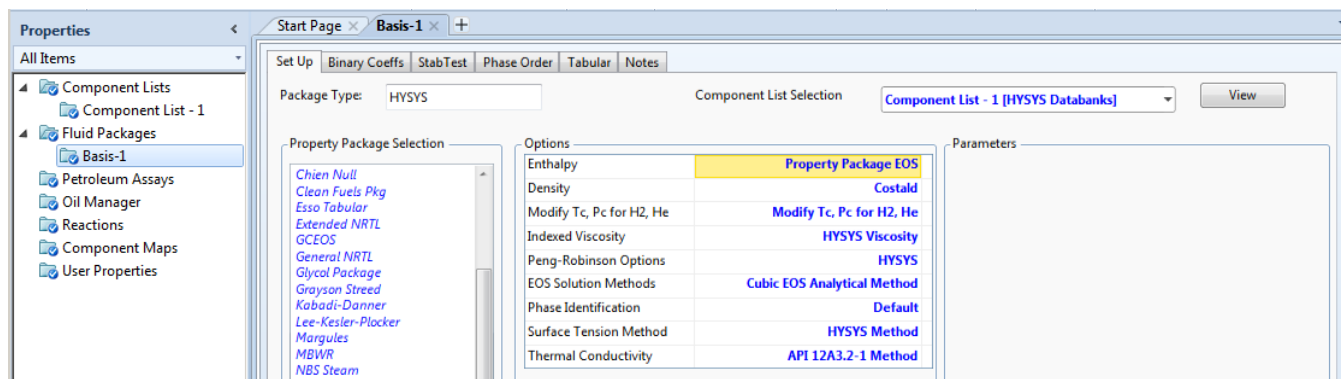


Figure 5 – Component List and Fluid package defined

Tip: Multiple Fluid Packages

As with the component lists, you can create more than one fluid package. A larger simulation comprised of several flowsheets may warrant several specialized fluid packages, each assigned to a specific stream or subflowsheet.

Definitions for review:

Component List	A list of chemical components from the components library that will be used in the simulation.
Property Package	A collection of calculation methods HYSYS will use to determine values for different variables.
Fluid Package	The combination of a Component List and a Property Package.

¹Depending on what is required in a specific flowsheet, you might want to adjust these options, or add other advanced information such as reactions and interaction parameters to the fluid package. But the minimum requirements are a selected property package, and a component list.

1.4.1. Save the Case

Before proceeding, save your case by selecting Save from the File menu, or pressing Ctrl S. If this is the first time you have saved your case, the Save As property view appears. By default, the File Path is the Cases sub-directory in your HYSYS directory.

In the File Name field, type a name for the case, for example gasplant. You do not have to enter the .hsc extension; HYSYS automatically adds it for you. Once you have entered a file name, press Enter or click Save.

2. Entering the Simulation Environment

Up until now you have been working in the properties environment. Now that the components list and fluid packages have been set up, you can move to the simulation environment.

To enter the Simulation Environment, click the Simulation bar on the lower left corner, in the navigation pane.

In the Simulation environment, a number of different items are now available in the ribbon bar. The Process Flow Diagram and the Object Palette are open on the desktop.

When completed, the PFD represents the flowsheet topology for a case. It shows the operations and streams and the directions of flows between them. You can also attach information tables or annotations to the PFD.

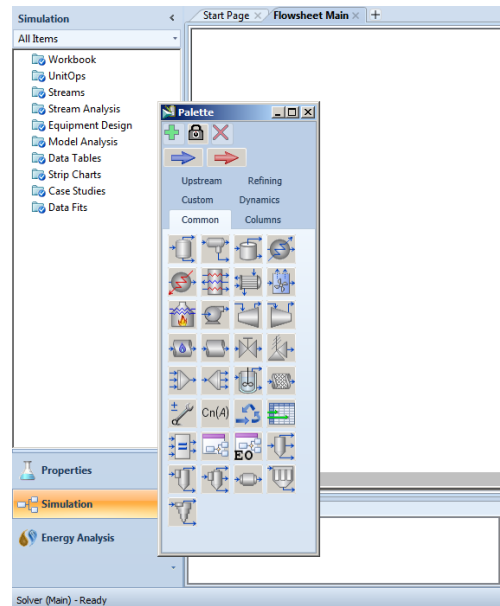


Figure 6 - Enter the Simulation Environment

2.1. Installing the Feed Streams

In general, the first thing you do in the Simulation environment is to install one or more feed streams. The following procedure explains how to create and set up a new stream from the Object Palette.

1. On the Object Palette, click the blue Material Streams button.
2. Click within the PFD area. The stream is added, showing a blue arrow icon and a number as a default stream name.

2.1.1. Enter Feed Conditions

Next you will define the minimum feed conditions. You'll name the stream and define the temperature, pressure and molar flow.

1. Double click the stream icon to open the stream's property view window. Most HYSYS property views are divided into tabs, and each tab is divided into pages. It should open to the Worksheet Tab, Conditions Page.
2. In the Stream Name field, enter *Feed 1*.
3. Type 60 in the Temperature cell. In the Unit drop-down list, HYSYS displays the default units for temperature, in this case F. This is the correct unit for this exercise. Press Enter.

The active location moves to the Pressure cell. If you know the stream pressure in another unit besides the default unit of psia, HYSYS will accept your input in any one of the available different units and automatically convert the supplied value to the default unit for you. For this example, the pressure of Feed 1 is 41.37 bar.

Material Stream: Feed1		
Worksheet Attachments Dynamics		
Worksheet	Stream Name	Feed1
Conditions	Vapour / Phase Fraction	<empty>
Properties	Temperature [F]	60.00
Composition	Pressure [psia]	600.0
Oil & Gas Feed	Molar Flow [MMSCFD]	6.000
Petroleum Assay	Mass Flow [lb/hr]	<empty>
K Value	Std Ideal Liq Vol Flow [barrel/day]	<empty>
User Variables	Molar Enthalpy [Btu/lbmole]	<empty>
Notes	Molar Entropy [Btu/lbmole-F]	<empty>
Cost Parameters	Heat Flow [Btu/hr]	<empty>
Normalized Yields	Liq Vol Flow @Std Cond [barrel/day]	<empty>
	Fluid Package	Basis-1
	Utility Type	

Figure 7 - Setting Up a Material Stream

4. In the Pressure cell, type 41.37. Click the down arrow icon in the Unit drop-down list to open the list of units. Either scroll through the list to find bar, or begin typing it. HYSYS will match your input to locate the required unit. Once bar is selected, press Enter.

HYSYS automatically converts the pressure to the default unit, psia, and the active selection moves to the Molar Flow cell.

- In the Molar Flow cell, type 6 and press Enter. The default Molar Flow unit is already MMSCFD, so you do not have to modify the units.

2.1.2. Define the Stream Composition

Now we need to define how much of each component exists in the stream.

- Click Composition under the Worksheet tab to go to the Composition page. By default, the components are listed by Mole Fractions.
- Click on the Mole Fractions cell for Nitrogen. Type 0.01 and press Enter. The Input Composition for Stream property view appears.

This view is designed to streamline the specification of a stream composition and complete the stream's compositional input.

- Click on the Mole Fractions cell for CO₂, type 0.01, then press Enter.
- Enter the remaining fractions as shown below.

Nitrogen	.01
CO ₂	.01
Methane	.6
Ethane	.2
Propane	.1
i-Butane	.04
n-Butane	.04

When you have entered the fraction of each component the total at the bottom of the property view will equal 1.0000.

- Click OK, and HYSYS accepts the composition. The stream is now defined, so HYSYS flashes it at the conditions given to determine its remaining properties.

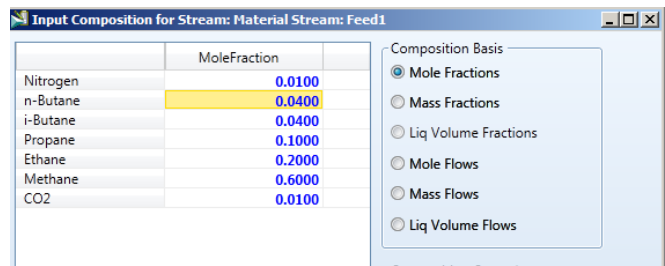


Figure 8 - Defining Stream Composition

In the Feed 1 property view, click Conditions to go back to the conditions page. The calculated properties of Feed

1 are now entered. The values you specified are in blue and the calculated values are in black. For streams with multiple phases, scroll horizontally to view the properties of each phase. New or updated information is automatically transferred among all locations in HYSYS.

Note: The following table describes the methods available to determine stream composition on the Input Composition property view:

Composition Basis Radio Buttons	Lets you input the stream composition in some fractional basis other than Mole Fraction, or by component flows, by selecting the appropriate radio button before providing your input.
Normalizing	<p>Lets you enter the relative ratios of components; for example, 2 parts N2, 2 parts CO2, 120 parts C1, etc. Rather than manually converting these ratios to fractions summing to one, enter the individual numbers of parts and click the Normalize button. HYSYS will compute the individual fractions to total 1.0.</p> <p>Normalizing is also useful when you have a stream consisting of only a few components. Instead of specifying zero fractions (or flows) for the other components, enter the fractions (or the actual flows) for the non-zero components, leaving the others <empty>. Click the Normalize button, and HYSYS will force the other component fractions to zero.</p>
Calculation status/color	<p>As you input the composition, the component fractions (or flows) initially appear in red, indicating the final composition is unknown. These values will become blue when the composition has been calculated. Three scenarios result in the stream composition being calculated:</p> <ul style="list-style-type: none"> Input the fractions of all components, including any zero components, such that their total is exactly 1.0000. Then click OK. Input the fractions (totalling 1.000), flows or relative number of parts of all non-zero components. Click the Normalize button, then OK. Input the flows or relative number of parts of all components, including any zero components, then click OK. <p>The red and blue text are the default colors; yours may appear different depending on your settings on the Colors page of the Session Preferences property view.</p>

2.2. Create a Second Feed Stream

1. Use the Object palette to add a second material stream, and define the conditions this way:

Name	Feed 2
Temperature	60
Pressure	600
Molar Flow	4

2. Next, select the Composition page and click the Edit button. The Input Composition for Stream property view appears.

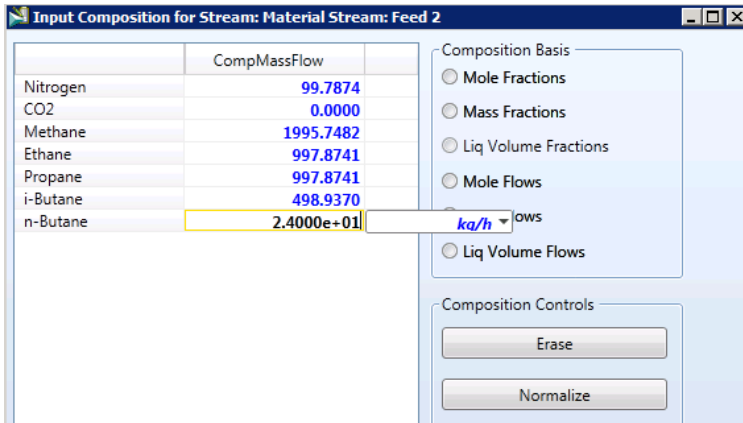


Figure 9 - Enter the stream composition on a Mass basis.

The current Composition Basis setting is Mole Fraction, the Preferences default. You must enter the stream composition on a Mass basis. Change the Composition Basis to Mass Fractions.

3. Input the mass fractions for the remaining components as shown below: (Feed 2 does not contain CO₂, so it will remain undefined).

Nitrogen	0.02	Ethane	0.20
CO ₂	<empty>	Propane	0.20
Methane	0.40	i-Butane	0.10
		n-Butane	0.08

4. Click Normalize once you have entered the values.
5. Click OK to close the property view and return to the stream view. HYSYS performs a flash calculation to determine the unknown properties of Feed 2, as indicated by the green OK status bar.

2.3. Analysis Tools: Phase Diagram

HYSYS can attach a variety of analysis and monitoring tools to flowsheet objects. Here you will see how to attach a phase diagram for a material stream using the HYSYS Envelope Analysis tool.

An Analysis tool is a separate entity from the stream or other object it is attached to. If you delete it, the host object is not affected. Likewise, if you delete the stream the tool will remain as an object in one of Analysis folders of the navigation pane, but will not display any information until you attach another stream to it.

1. On the property view for stream Feed 2, click the Attachments tab, then select the Analysis page.
2. Click Create.
3. In the Available Analysis property view, select Envelope and click Add. The Envelope Analysis property view appears. Click the Performance tab. HYSYS creates and displays a phase envelope plot for the stream.

Right click the graph to show the display, zoom and print controls.

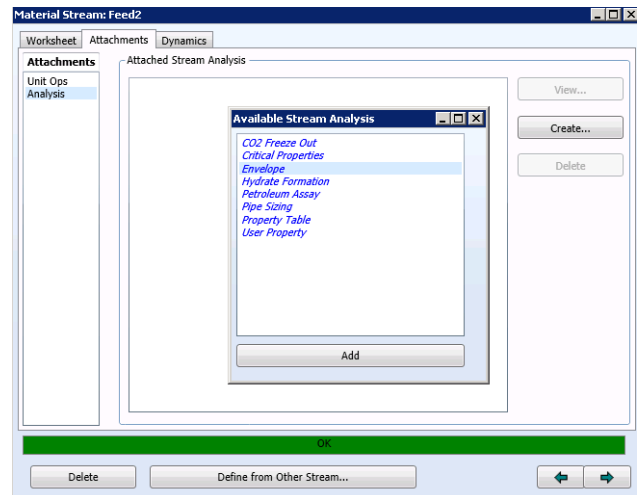


Figure 10 - Applying the Envelope Analysis

4. Click the Performance tab, then select the Plots page. The default Envelope Type is PT. To view another envelope type, select the appropriate radio button in the Envelope Type group. Depending on the type of envelope selected, you can specify and display Quality curves, Hydrate curves, Isotherms, and Isobars.

To make the envelope property view more readable, maximize or re-size the property view.

To view the data in a tabular format, select the Table page.

5. Close the Analysis and Feed 2 property views.

2.4. Installing the Mixer

In the last section you defined the feed streams. Now you will install the unit operations for processing the gas.

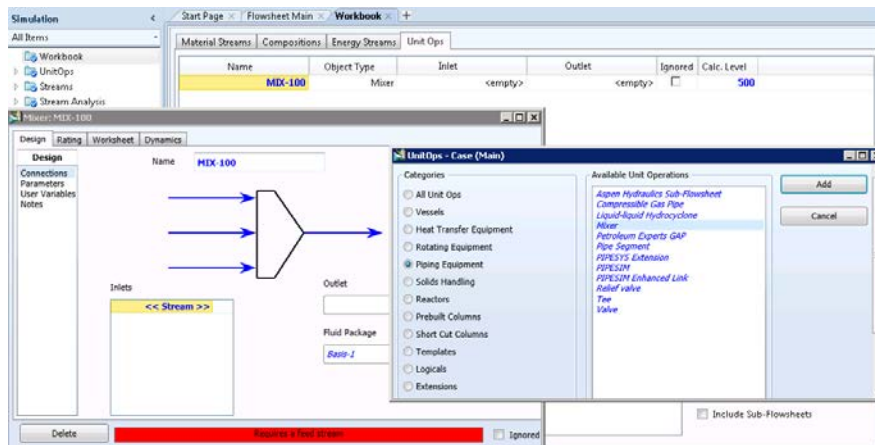


Figure 11 - Adding the mixer from the Workbook window

The first operation you will install is a Mixer, used to combine the two feed streams. As with most tasks in HYSYS, installing an operation can be accomplished in a number of ways. One method is through the Unit Ops tab of the Workbook. The Workbook is a spreadsheet-like view of the whole simulation, divided into object types and simulation environments. You

can use the Workbook as an alternative way to add, edit or delete operations from the case.

1. Click the Workbook folder in the navigation pane. Click the Unit Ops tab of the Workbook.
2. Click Add UnitOp. The UnitOps selector appears, listing all available unit operations.
3. Select Mixer and Click Add. The Mixer is added and the Mixer property view appears. Click Cancel to close the UnitOps selector.

As with a stream, a unit operation's property view contains all the information defining the operation, organized in tabs and pages. (The four tabs shown for the Mixer: Design, Rating, Worksheet, and Dynamics, appear in the property view for most operations.)

HYSYS enters the default name MIX-100 for the Mixer. As with streams, the default naming scheme for unit operations can be changed on the Session Preferences property view.


Many operations such as the Mixer accept multiple feed streams. When you see a table like the one in the Inlets group, the operation will accept multiple stream connections at that location. When the Inlets table has focus, you can access a drop-down list of available streams.

The status bar at the bottom of the property view shows that the operation requires a feed stream.

1. In the Inlets group, click the arrow next to the <<Stream>> cell.
2. Select Feed 1 from the list. The stream is added to the list of Inlets, and <<Stream>> automatically moves down to a new empty cell.
3. Repeat to connect the other stream, Feed 2.

The status indicator now displays "Requires a product stream". Here you'll see how to add a new stream to the flowsheet directly from a unit operation.

1. Click in the Outlet field.
2. Type MixerOut in the cell and press Enter. HYSYS recognizes that there is no existing stream named MixerOut, so it creates a new stream with this name. The status indicator now displays a green OK, indicating that the operation and attached streams are completely calculated.
3. Click the Parameters page.
4. In the Automatic Pressure Assignment group, leave the default setting at **Set Outlet to Lowest Inlet**.

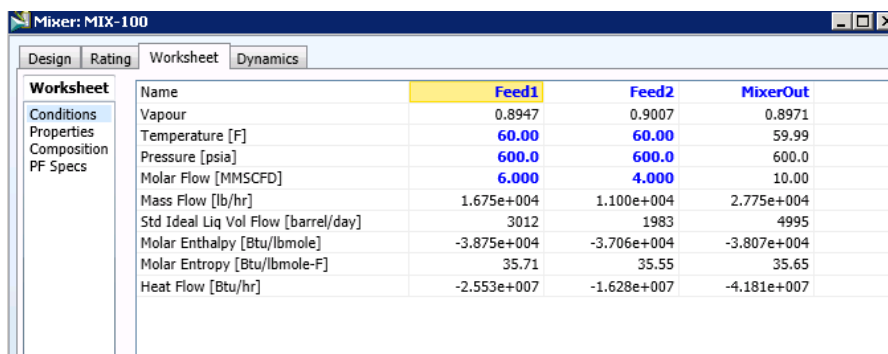

Name	Feed1	Feed2	MixerOut
Vapour	0.8947	0.9007	0.8971
Temperature [F]	60.00	60.00	59.99
Pressure [psia]	600.0	600.0	600.0
Molar Flow [MMSCFD]	6.000	4.000	10.00
Mass Flow [lb/hr]	1.675e+004	1.100e+004	2.775e+004
Std Ideal Liq Vol Flow [barrel/day]	3012	1983	4995
Molar Enthalpy [Btu/lbmole]	-3.875e+004	-3.706e+004	-3.807e+004
Molar Entropy [Btu/lbmole-F]	35.71	35.55	35.65
Heat Flow [Btu/hr]	-2.553e+007	-1.628e+007	-4.181e+007

Figure 12 - The Mixer calculates the MixerOut stream.

HYSYS has calculated the outlet stream by combining the two inlets and flashing the mixture at the lowest pressure of the inlet streams. In this case, both inlets have the same pressure (600 psia), so the outlet stream is set to 600 psia.

To view the calculated outlet stream values, click the Worksheet tab and select the Conditions page. The Worksheet tab is a condensed Workbook property view, displaying only those streams attached to the selected operation.

Now that the Mixer is completely defined, close the property view to return to the Workbook. The new operation appears in the table on the Unit Ops tab of the Workbook.

The table shows the operation Name, its Object Type, the attached streams (Feeds and Products), whether it is Ignored in the simulation, and its Calculation Level.

When you select an operation in the table and click **View UnitOp**, the view for the selected operation appears. Alternatively, double-clicking on any cell (except Inlet, Outlet, and Ignored) associated with the operation also opens the operation property view.

When any of the Name, Object Type, Ignored, or Calc. Level cells are active, the box at the bottom of the Workbook displays all streams attached to the current operation. Currently, the Name cell for MIX-100 has focus, and the box displays the three streams attached to this operation.

You can also open the property view for a stream directly from the Unit Ops tab.

2.5. Installing the Inlet Separator

Next you will install and define the inlet separator, which splits the two-phase MixerOut stream into its vapour and liquid phases.

1. Click Workbook in the navigation Pane, and in the Workbook view, click Unit Ops.
2. Click Add UnitOp, and select Separator.
3. Click Add. The Separator property view appears, displaying the Connections page on the Design tab.
4. In the Name cell, change the name to InletSep and press Enter.
5. Click the arrow to the right of the <<Stream>> cell and select the stream MixerOut.
6. In the Vapour Outlet cell, type SepVap in the field and press Enter to create the vapour outlet stream.
7. Click on the Liquid Outlet cell, type the name SepLiq, and press Enter. (An Energy stream could be attached to heat or cool the vessel contents but for this tutorial the energy stream is not required.)
8. Click the Design tab - Parameters page. The current default values for Delta P, Volume, Liquid Volume, and Liquid Level are acceptable.

The Volume, Liquid Volume, and Liquid Level default values generally apply only to vessels operating in dynamic mode or with reactions attached.

9. To view the calculated outlet stream data, click the Worksheet tab - Conditions page. When finished, close the separator property view.

2.6. Using Workbook Features

Before installing the remaining operations, you will look at a number of Workbook features that let you access information quickly and change how information is displayed. Once the flowsheet is established, advanced users rely on the workbook quite a bit; this is a good time to get familiar with it.

2.6.1. Tip: Access Operation Controls from the Workbook

Any cell in the workbook functions as a link to its parent object. If you double click a unit operation name, the control view for that operation opens. If you double click a stream name, or even a value listed under a stream heading, the stream's property view opens.

Try this: Click on any cell associated with the stream SepVap, found on the Material Streams tab. The list at the bottom of the form shows the operations to which this stream is attached. To access the property view for either of these operations, double-click on the operation name.

2.6.2. Add a Variable-Specific Tab to the Workbook

You can customize the Workbook to display specific information. In this section you will create a new Workbook tab that displays only stream pressure, temperature, and flow.

1. Select Workbook from the navigation pane.
2. In the Ribbon, select the Workbook tab.
3. In the Workbook ribbon, click Setup. The Workbook Setup property view appears.

The four existing tabs are listed in the Workbook Tabs box. When you add a new tab, it will be inserted before the highlighted tab (currently Material Streams).

1. In the Workbook Tabs group list, select the Compositions tab.
2. In the Workbook Tabs group, click Add. The New Object Type property view appears.
3. Click the icon beside Stream to expand the tree branch into Material Stream and Energy Streams.
4. Select the Material Stream and click OK. You will return to the Setup property view, and the new tab appears in the list after the existing Material Streams tab.
5. In the Object group, click in the Name cell and change the name for the new tab from the default Streams 1 to P,T,Flow to better describe the tab contents.

Next you will customize the tab by removing the irrelevant variables.

- In the Variables group, hold the CTRL key and select Vapour Fraction, Mass Flow, Heat Flow, and Molar Enthalpy. Four variables are now selected. Release the CTRL key.
- Click the Delete button. The variables are removed from the list.

Close the Setup property view to return to the Workbook property view and check the new tab. At this point, save your case.

	Feed1	Feed2	MixerOut	SepVap	SepLiq
Name					
Temperature [F]	60.00	60.00	59.99	59.99	59.99
Pressure [psia]	600.0	600.0	600.0	600.0	600.0
Molar Flow [MMSCFD]	6.000	4.000	10.00	8.971	1.029
Std Ideal Liq Vol Flow [barrel/day]	3012	1983	4995	4339	656.1

Figure 13 - The new variable-specific tab added to the workbook

2.7. Installing the Heat Exchanger

Next, you will install the gas/gas heat exchanger. Up to now you have created five streams and two unit operations without referring to the flowsheet. For the heat exchanger, we'll apply it directly to the flowsheet using the Object Palette. If you are still in the Workbook view, click **View > Flowsheet** on the Ribbon. You'll see the basic layout automatically placed for you.

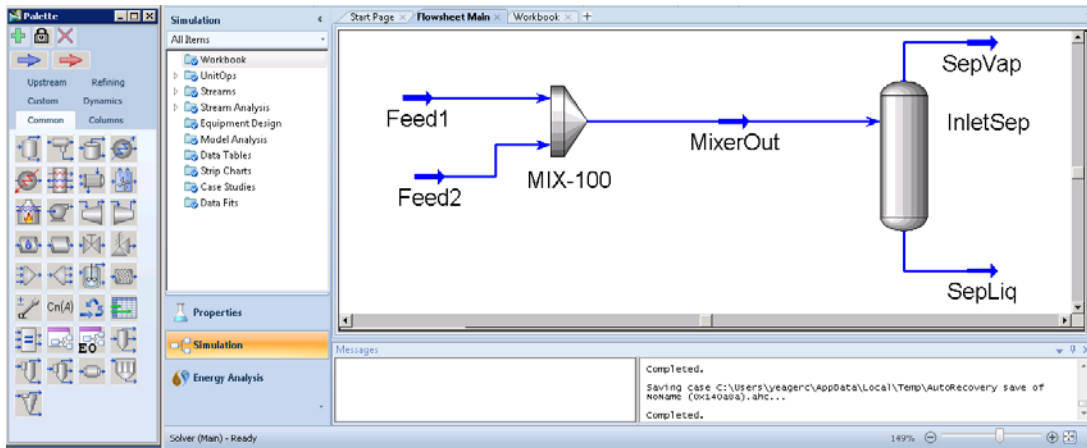


Figure 14 - Objects automatically placed in the flowsheet.

Press F4 to open the Object Palette.

On the Object Palette, double-click the Heat Exchanger icon. The Heat Exchanger property view opens to the Connections page on the Design.

- In the Name field, change the operation name from its default E-100 to Gas/Gas.
- Attach the Inlet and Outlet streams as shown below, using the methods learned in the previous sections. You will have to create all streams except SepVap, which is an existing stream that can be selected from the Tube Side Inlet drop-down list.

Field	Value
Name	Gas/gas
Tube Side Inlet	SepVap
Shell Side Inlet	LTSVap
Tube Side Outlet	CoolGas
Shell Side Outlet	SalesGas

3. Click the Parameters page. There are several heat exchanger models to choose from - the Simple End Point model is the default setting and is acceptable for this tutorial.
4. Enter 10 psi for the pressure drop in both the Tube and Shell Side Delta P.
5. Click the Rating tab, then select the Sizing page. In the Configuration group, change the Tube Passes per Shell cell value to 1, to model Counter Current Flow.

Close the Heat Exchanger view and return to the Material Streams tab of the Workbook property view.

The new stream CoolGas has not been flashed yet, as its temperature is unknown. The CoolGas stream will be flashed later when a temperature approach is specified for the Gas/Gas heat exchanger. Notice how partial information is passed (for stream CoolGas) throughout the flowsheet. HYSYS always calculates as many properties as possible for the streams based on the available information.

P,T,Flow	Streams	Compositions	Energy Streams	Unit Ops	
Name	Feed1	Feed2	MixerOut	SepVap	SepLiq
Temperature [F]	60.00	60.00	59.99	59.99	59.99
Pressure [psia]	600.0	600.0	600.0	600.0	600.0
Molar Flow [MMSCFD]	6.000	4.000	10.00	8.971	1.029
Std Ideal Liq Vol Flow [barrel/day]	3012	1983	4995	4339	656.1
Name	LTSVap	CoolGas	SalesGas		
Temperature [F]	<empty>	<empty>	<empty>		
Pressure [psia]	<empty>	590.0	<empty>		
Molar Flow [MMSCFD]	<empty>	8.971	<empty>		
Std Ideal Liq Vol Flow [barrel/day]	<empty>	4339	<empty>		

Figure 15 - Back in the workbook view - the Heat Exchanger streams are not solved yet.

2.7.1. Tip: Arranging the PFD

If the streams or operations are not all visible, you can go to the Flowsheet /Modify ribbon tab and in the Flowsheet field, click the tiny down arrow in the lower left corner of the field. Click *Auto Position All* from the Additional Commands menu. HYSYS now displays all streams and operations, arranging them in a logical manner. The View ribbon – Zoom to Fit command is also useful in centering the flowsheet.

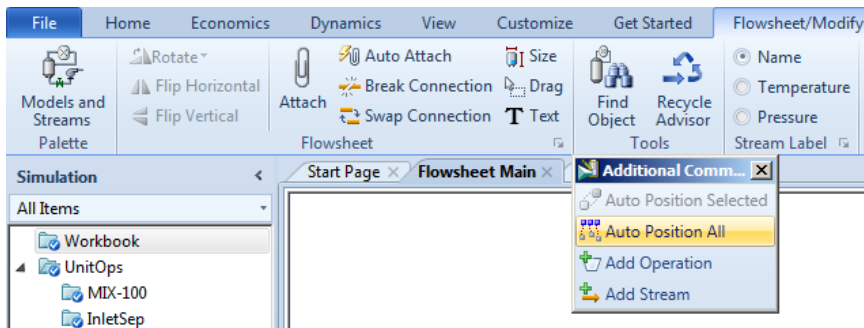


Figure 16 - Access flowsheet position commands from the tiny down-arrow

As a graphic representation of your simulation, the PFD shows the connections among all streams and operations. As in the workbook, you can open the property view for an object by double-clicking its icon.

Placing the cursor over an object shows a “fly-by” summary of information. Each object, when selected, has a right click menu of specialized options.

2.7.2. Tip: PFD Color Codes and Calculation Status

Before proceeding, take a look at how the PFD lets you trace the calculation status of the objects in your flowsheet. If you recall, the status indicator at the bottom of a property view for a stream or operation displayed three different states for the object:

Indicator Status	Description
Red	A major piece of defining information is missing from the object. For example, a feed or product stream is not attached to a Separator. The status indicator is red, and an appropriate warning message appears.
Yellow	All major defining information is present, but the stream or operation has not been solved because one or more degrees of freedom is present. For example, a Cooler where the outlet stream temperature is unknown. The status indicator is yellow, and an appropriate warning message appears
Green	The stream or operation is completely defined and solved. The status indicator is green, and an OK message appears.

Keep in mind that the above colors are the HYSYS default colors. You can change/customize the colors in the Session Preferences.

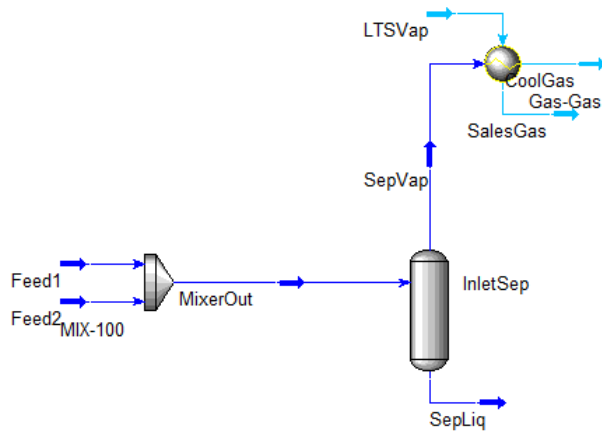


Figure 17 - The Flowsheet with the Gas-Gas Heat Exchanger

When you are working in the PFD, the streams and operations are also color-coded to indicate their calculation status. The mixer and inlet separator are completely calculated, so they have a black outline. For the heat exchanger Gas/Gas, however, the conditions of the tube side outlet and both shell side streams are unknown, so the exchanger has a yellow outline indicating its unsolved status.

Colors also show the status of streams. For material streams, a dark blue icon indicates the stream has been flashed and is entirely known. A light blue icon indicates the stream cannot be flashed until some additional information is supplied. Similarly, a dark red icon indicates an energy stream with a known duty, while a purple icon indicates an unknown duty.

The icons for all streams installed to this point are dark blue except for the Heat Exchanger shell-side streams LTSVap and SalesGas, and tube-side outlet CoolGas.

2.8. Installing the Chiller

In the next step you will install a chiller, which will be modelled using a Cooler unit operation.

- Press F4 to access the Object Palette

The Chiller will be added to the right of the LTS, so make some empty space available in the PFD by scrolling to the right using the horizontal scroll bar.

1. Click the Cooler icon on the Object Palette.
2. Position the cursor over the PFD.

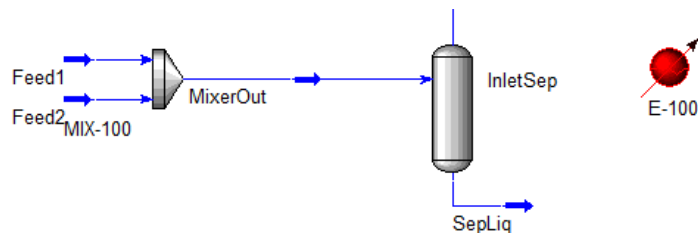


Figure 18 - Drop the cooler to the right of the Inlet Separator

3. Click on the PFD where you want to drop the Cooler.

HYSYS creates a new Cooler with a default name, E-100. The Cooler icon has a red status (and color), indicating that it requires feed and product streams.

2.8.1. Connecting the Chiller

This is how to make the stream-to-unit operation connections graphically. (You can also connect them from within the unit operation's connections form, by picking the stream to connect from a list.)

1. Click the Attach icon in the Flowsheet/ Modify ribbon to enter Attach mode. (When you are in Attach mode, you will not be able to move objects in the PFD. You can temporarily toggle between Attach and Move mode by holding down the CTRL key. To return to Move mode, click the Attach icon again.)
2. Hold the cursor over the right end of the CoolGas stream icon. A small box appears at the cursor tip. Through the transparent box, you can see a square connection point, and a pop-up description attached to the cursor tail. The pop-up "Out" indicates which part of the stream is available for connection, in this case the stream outlet.
3. With the pop-up "Out" visible, click and hold. The transparent box becomes solid black, indicating that you are beginning a connection.
4. Still holding down, move the cursor toward the left (inlet) side of the Cooler. A trailing line appears between the CoolGas stream icon and the cursor, and a connection point appears at the Cooler inlet.
5. Place the cursor near the connection point, and the trailing line snaps to that point. A solid white box appears at the cursor tip, indicating an acceptable end point for the connection.
6. Release the left mouse button, and the connection is made to the connection point at the Cooler inlet.

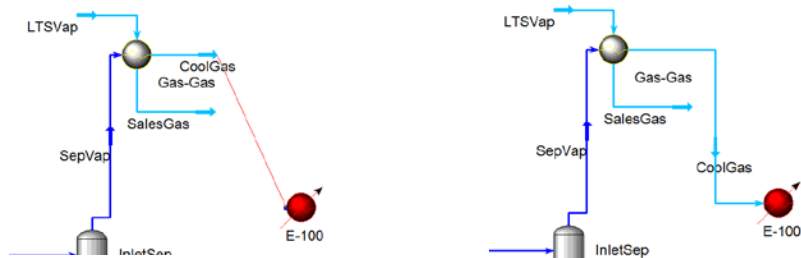


Figure 19 - Use Attach mode to graphically attach CoolGas to the chiller operation.

2.8.2. Graphically Add Outlet and Energy Streams

Position the cursor over the right end of the Cooler icon. The connection point and the pop-up "Product" appears.

1. With the pop-up visible, left-click and hold. The white box again becomes solid black.
2. Move the cursor to the right of the Cooler. A white stream icon appears with a trailing line attached to the Cooler outlet. The stream icon shows that a new stream will be created after the next step is completed.
3. With the white stream icon visible, release the left mouse button. HYSYS creates a new stream with the default name 1.
4. Repeat the steps to create the Cooler energy stream, originating the connection from the arrowhead on the Cooler icon.

The new stream is automatically named Q-100. The Cooler has yellow (warning) status, indicating that all necessary connections have been made but the attached streams are not entirely known.

5. Click the Attach Mode icon again to return to Move mode.

Tip: To break an incorrect connection:

1. Click the Break Connection icon on the PFD toolbar.
2. Move the cursor over the stream line connecting the two icons. A checkmark attached to the cursor appears, indicating an available connection to break.
3. Click once to break the connection.

2.9. Defining the Material and Energy Streams

The Cooler material streams and the energy stream are unknown at this point, so they are light blue and purple, respectively.

1. Double-click the Cooler icon to open its property view.

2. On the Connections page, the names of the Inlet, Outlet, and Energy streams that you recently attached appear in the appropriate cells.
3. In the Name field, change the operation name to Chiller.
4. Select the Parameters page. In the Delta P field, specify a pressure drop of 10 psi.
5. Close the Cooler property view.

At this point, the Chiller has two degrees of freedom; one of these will be eliminated when HYSYS flashes the CoolGas stream after the exchanger temperature approach is specified.

To use the remaining degree of freedom, either the Chiller outlet temperature or the amount of duty in the Chiller energy stream must be specified. The amount of chilling duty which is available is unknown, so you will provide an initial guess of 0 F for the Chiller outlet temperature. Later, this temperature can be adjusted to provide the desired sales gas dew point temperature.

1. Double-click on the outlet stream icon (1) to open its property view.
2. In the Name field, change the name to ColdGas.
3. In the Temperature field, specify a temperature of 0 degrees F.

The remaining degree of freedom for this stream has now been used, so HYSYS flashes ColdGas to determine its remaining properties. Close the ColdGas property view and return to the PFD property view.

The Chiller still has yellow status, because the temperature of the CoolGas stream is unknown.

4. Double-click the energy stream icon (Q-100) to open its property view. The required chilling duty (in the Heat Flow cell) is calculated by HYSYS when the Heat Exchanger temperature approach is specified in a later section.
5. Rename the energy stream C3Duty and close the property view.

2.10. Installing the Low-Temperature Separator (LTS)

Now that the chiller has been installed, the next step is to install the low-temperature separator (LTS) to separate the gas and condensed liquids in the ColdGas stream.

2.10.1. Adding and Connecting the LTS

Make some empty space available to the right of the Chiller using the horizontal scroll bar.

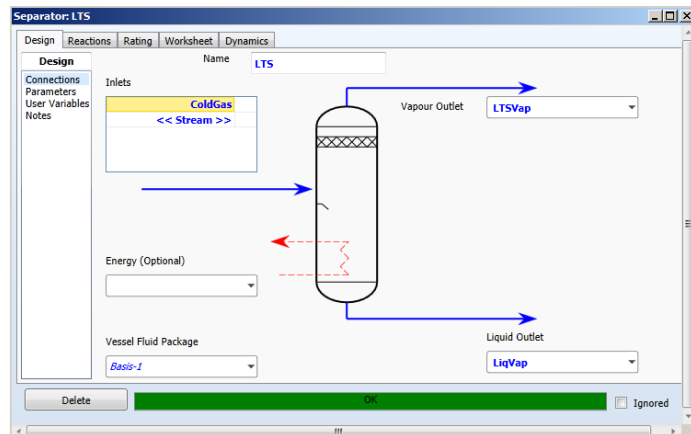


Figure 20 - Connect the LTS

1. Position the cursor over the Separator icon on the Object Palette.
2. Click, hold, and drag the cursor over the PFD to the right of the Chiller. Release the right mouse button to drop the Separator onto the PFD. A new Separator appears with the default name V-100.

The Separator will have two outlet streams, liquid and vapour. The vapour outlet stream LTSVap, which is the shell side inlet stream for Gas/Gas, has already been created. The liquid outlet will be a new stream.

3. Double click the separator to open its property view. In the Design Connections page, set up the connections like this:

Inlets	Coldgas (pick from list)
Vapor outlet	LTSVap (pick from list)
Liquid Outlet	LTSLiq (Type in as new)

4. In the Name field, change the name to **LTS**. Close the LTS property view.

2.10.2. Adding a Heat Exchanger Specification

At this point, the outlet streams from the Gas/Gas heat exchanger are still unknown.

1. Double-click on the Gas/Gas icon to open the exchanger property view.
2. Click the Design tab - Specs page.

The Specs page lets you input specifications for the Heat Exchanger. The Solver group on this page shows that there are two Unknown Variables and the number of Constraints is 1, so the remaining Degrees of Freedom is 1. HYSYS provides two default constraints in the Specifications group, although only one has a value:

Specification	Description
Heat Balance	The tube side and shell side duties must be equal, so the heat balance must be zero (0).
UA	This is the product of the overall heat transfer coefficient (U) and the area available for heat exchange (A). HYSYS does not provide a default UA value, so it is unknown at this point. It will be calculated by HYSYS when another constraint is provided.

To use the remaining degree of freedom, a 10 degree F minimum temperature approach to the hot side inlet of the exchanger will be specified.

1. In the Specifications group, click the Add button. The ExchSpec (Exchanger Specification) view appears.
2. In the Name cell, change the name to Hot Side Approach.

The default specification in the Type cell is Delta Temp, which allows you to specify a temperature difference between two streams. The Stream (+) and Stream (-) cells correspond to the warmer and cooler streams, respectively.

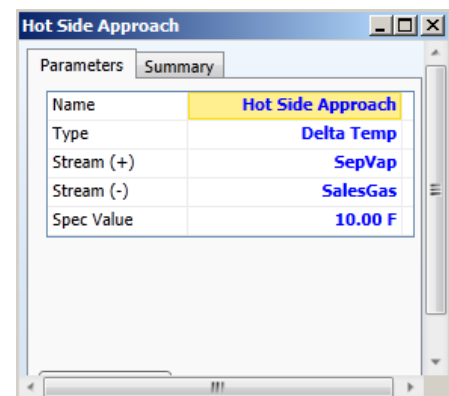


Figure 21 - Hot Side Approach setup

- In the Stream (+) cell, select SepVap from the drop-down list.
- In the Stream (-) cell, select SalesGas from the drop-down list.
- In the Spec Value cell, enter 10 degrees F.

HYSYS will converge on both specifications and the unknown streams will be flashed.

2.10.3. Review Results

1. Close the ExchSpec property view to return to the Gas/Gas property view. The new specification appears in the Specifications group on the Design tab - Specs page.
2. Click the Worksheet tab - Conditions page to view the calculated stream properties.
Using the 10 degree F approach, HYSYS calculates the temperature of CoolGas as 42.9 degrees F. (Very slight differences may result in different versions of HYSYS.) All streams in the flowsheet are now completely known.
3. Click the Performance tab, then select the Details page, where HYSYS displays the Overall Performance and Detailed Performance.

Worksheet	Name	SepVap	CoolGas	LTSVap	SalesGas
Conditions	Vapour	1.0000	0.9389	1.0000	1.0000
Properties	Temperature [F]	59.99	42.95	0.0000	49.99
Composition	Pressure [psia]	600.0	590.0	580.0	570.0
PF Specs	Molar Flow [MMSCFD]	8.971	8.971	7.015	7.015
	Mass Flow [lb/hr]	2.316e+004	2.316e+004	1.561e+004	1.561e+004
	Std Ideal Liq Vol Flow [barrel/day]	4339	4339	3165	3165
	Molar Enthalpy [Btu/lbmole]	-3.657e+004	-3.704e+004	-3.536e+004	-3.475e+004
	Molar Entropy [Btu/lbmole-F]	36.77	35.86	35.61	36.90
	Heat Flow [Btu/hr]	-3.602e+007	-3.649e+007	-2.724e+007	-2.677e+007

Figure 22 - Calculations for the Gas-gas exchanger

Two parameters of interest are the UA and LMTD (logarithmic mean temperature difference), which HYSYS has calculated as 2.08e4 Btu/F-hr and 22.6 degrees F, respectively.

4. When you are finished reviewing the results, close the Gas/Gas property view.

2.11. Checking the Sales Gas Dew Point

The next step is to check the SalesGas stream to see if it meets a dew point temperature specification. This is to ensure that no liquids form in the transmission line. A typical pipeline dew point specification is 15 degrees F at 800 psia, which will be used for this example.

To test the current dew point you will

1. Create a stream with a composition identical to SalesGas,

2. Specify the dew point pressure, and
3. Have HYSYS flash the new stream to calculate its dew point temperature.

To do this you will install a Balance operation.

2.11.1. Install the Balance Operation

1. Double-click the Balance icon on the Object Palette. The property view for the new operation appears.
2. In the Name field, type DewPoint. In the <<Stream>> cell in the Inlet Streams table, select SalesGas.
3. In the <<Stream>> cell in the Outlet Streams table, create the outlet stream by typing SalesDP, (Sales Dew Point) then press Enter. Changes made to the vapor fraction, temperature or pressure of the new outlet stream SalesDP will not affect the rest of the flowsheet. However, changes which affect the inlet stream SalesGas will cause SalesDP to be re-calculated because of the molar balance between these two streams.
4. Click the Parameters tab.
5. In the Balance Type group, select the Component Mole Flow radio button.

The vapour fraction and pressure of SalesDP can now be specified, and HYSYS will perform a flash calculation to determine the unknown temperature.

1. Click the Worksheet tab.
2. In the SalesDP column, Vapour cell, enter 1.0.
3. In the Pressure cell, enter 800 psia.

HYSYS flashes the stream at these conditions, returning a dew point Temperature of 5.27 degrees F, which is well within the pipeline allowance of 15 degrees F.

	SalesGas	SalesDP
Name	SalesGas	SalesDP
Vapour	1.0000	1.0000
Temperature [F]	49.99	5.273
Pressure [psia]	570.0	800.0
Molar Flow [MMSCFD]	7.015	7.015
Mass Flow [lb/hr]	1.561e+004	1.561e+004
Std Ideal Liq Vol Flow [barrel/day]	3165	3165
Molar Enthalpy [Btu/lbmole]	-3.475e+004	-3.560e+004
Molar Entropy [Btu/lbmole-F]	36.90	34.63
Heat Flow [Btu/hr]	-2.677e+007	-2.742e+007

Figure 23 - Enter Vapor and pressure for SalesDP.

Close the DewPoint property view to return to the PFD.

Note: When HYSYS created the Balance and the new stream, their icons were probably placed in the far right of the PFD. If you like, you can click and drag the Balance and SalesDP icons to a more appropriate location, such as immediately to the right of the SalesGas stream.

2.12. Install the Second Mixer

In this section you will install a second mixer, which is used to combine the two liquid streams, SepLiq and LTSLiq, into a single feed for the Distillation Column.

1. In the PFD, make some empty space available to the right of the LTS using the horizontal scroll bar.
2. Click and hold the left mouse button on the Mixer icon in the Object Palette, and drag the icon to the right of the LTSLiq stream icon. Release to drop the Mixer onto the PFD.
3. Open the Connections form for the mixer. In the inlets field, select the streams LTSLiq and SepLiq.
4. For the outlet field, type in the new stream name TowerFeed, and press Enter.
5. Now, still in the form, right-click the name TowerFeed, and click View in the pop up menu. The property view for the new stream opens. HYSYS has automatically combined the two inlet streams and flashed the

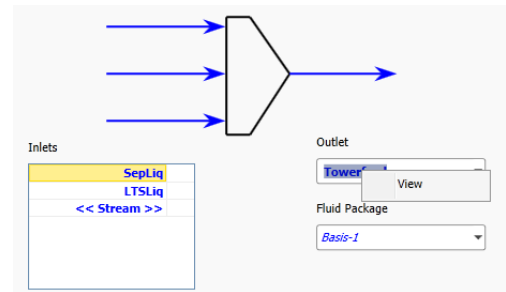


Figure 24 - Right click the stream name to view stream properties

mixture to determine the outlet conditions.

Close the property views.

2.13. Install the Depropanizer Column

Columns are usually the most complex unit operations in a simulation. HYSYS has a number of pre-built column templates that you can install and customize by changing the default specifications. In this section, you will use one of these to install and configure a distillation column.

First, go to the File – Options Button – Simulation Options form and be sure that the *Use Input Experts* checkbox is checked. This brings up a wizard-like sequence of setup windows when you add a column that help you specify the column operation.

On the Object Palette, select the Columns tab, and double-click the Distillation Column Sub-Flowsheet icon. The first page of the Input Expert property view appears.

2.13.1. Define the Column Stages

When you install a column template, HYSYS supplies default information such as the number of stages. The current active cell is # Stages (Number of Stages), indicated by the thick border around this cell and the presence of 10 (the default number of stages).

Some points worth noting:

- These are theoretical stages, as the HYSYS default stage efficiency is one. If you want to specify real stages, you can change the efficiency of any or all stages later.
- The Condenser and Reboiler are considered separate from the other stages, and are not included in the Number of Stages field.

For this example, 10 theoretical stages will be used, so leave the Number of Stages at its default value.

1. Click on the <<Stream>> ▼ dropdown list in the Inlet Streams table. Select TowerFeed as the inlet feed stream to the column.

HYSYS supplies a default feed location in the middle of the Tray Section (TS), in this case stage 5 (5_Main TS). This default location is used, so there is no need to change the Feed Stage.

2. This column has Overhead Vapour and Bottoms Liquid products, but no Overhead Liquid (distillate) product.

In the Condenser group, select the Full Rflx radio button. The distillate stream is removed. This is the same as leaving the Condenser as Partial and later specifying a zero distillate rate.

3. Enter the stream and column names as shown below.

Column Name	DePropanizer
Stream	TowerFeed
Condenser Energy Stream	CondDuty
Ovhd Vapor Outlet	Ovhd
Reboiler Energy Stream	RebDuty
Bottoms Liquid Outlet	LiquidProd

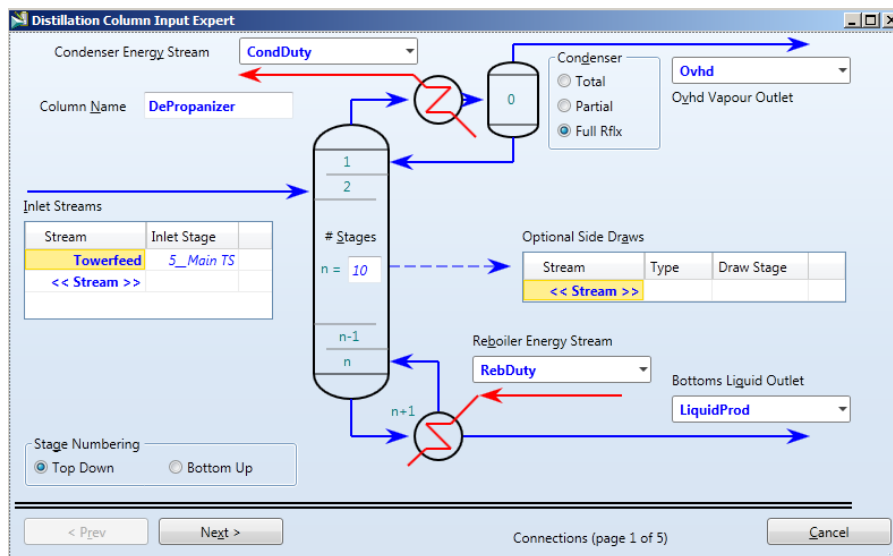


Figure 25 - Page One of the Column Input Expert

When you are finished, the Next button becomes active, and you can go to the next page of the Input Expert.

1. Click *Next* to go to the Reboiler Configuration View. Select the default Once-through, Regular HYSYS reboiler sections.
2. Click *Next* to advance to the Pressure Profile page.

In the Condenser Pressure field, enter 200 psia.

In the Reboiler Pressure field, enter 205 psia.

The Condenser Pressure Drop can be left at its default value of zero.

3. Click *Next* to advance to the Optional Estimates page. (Although HYSYS does not require estimates to produce a converged column, good estimates will usually result in a faster solution.) Specify a Condenser temperature of 40°F and a Reboiler Temperature Estimate of 200°F.
4. Click *Next* to advance to the Specifications page of the Input Expert. The Specifications page allows you to supply values for the default column specifications that HYSYS has created.
5. Enter a Vapour Rate of 2.0 MMSCFD and a Reflux Ratio of 1.0.

The Flow Basis applies to the Vapour Rate, so leave it at the default of Molar.

In general, a Distillation Column has three default specifications, however, by specifying zero overhead liquid flow (Full Reflux Condenser) one degree of freedom was eliminated. For the two remaining default specifications, overhead Vapour Rate is an estimate only, and Reflux Ratio is an active specification.

6. Click the *Done* button. The Distillation Column property view appears.

Now, select the Design tab - Monitor page. The Monitor page displays the status of your column as it is being calculated, updating information with each iteration. You can also change specification values and activate or de-activate specifications used by the Column solver directly from this page.

2.13.2. Adding a Column Specification

The current Degrees of Freedom number is zero, indicating the column is ready to be run. The Vapour Rate you specified in the Input Expert, however, is currently an active specification, and you want to use this only as an initial estimate for the solver for this exercise.

1. In the Ovhd Vap Rate row, uncheck the Active checkbox. Leave the Estimate checkbox checked.

	Specified Value	Current Value	Wt. Error	Active	Estimate	Current
Reflux Ratio	1.000	<empty>	<empty>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Ovhd Vap Rate	2.000 MMSCFD	2.000	0.0000	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>
Reflux Rate	<empty>	<empty>	<empty>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>
Btms Prod Rate	<empty>	<empty>	<empty>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>

Figure 26 - Uncheck the vapor rate in the Active Column

The Degrees of Freedom increases to 1, indicating that another active specification is required. For this example, we will specify a 2% propane mole fraction in the bottoms liquid.

2. Select the Specs page. This page lists all the Active and non-Active specifications which are required to solve the column.
3. In the Column Specifications group, click Add. The Add Specs property view appears.
4. From the Column Specification Types list, select Column Component Fraction. Click the Add Spec(s) button. The Comp Frac Spec property view appears.
5. In the Name cell, change the specification name to Propane Fraction.
6. In the Stage cell, select Reboiler from the drop-down list of available stages.
7. In the Spec Value cell, enter 0.02 as the liquid mole fraction specification value.
8. Click in the first cell <<Component>> in the Components table, and select Propane from the drop-down list of available components.

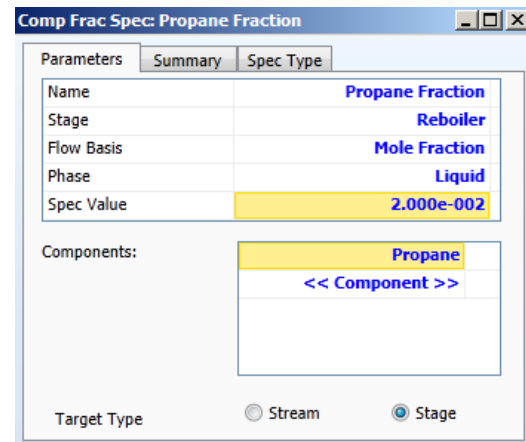


Figure 27 - Add a Column Component Fraction

Click the X to close this property view to return to the Column view. The new spec appears in the Column Specifications list on the Specs page. HYSYS automatically made the new specification active when you created it.


Return to the Monitor page. The new specification may not be visible unless you scroll down the table because it has been placed at the bottom of the Specifications list.

Click the Group Active button to bring the new specification to the top of the list, directly under the other Active specification. The Degrees of Freedom has returned to zero, so the column is ready to be calculated.

2.13.3. Running the Column

Click the Run button at the bottom of the Column property view to begin calculations. The information displayed on the Monitor page is updated with each iteration. The column converges quickly, in three iterations.

The table in the Optional Checks group displays the Iteration number, Step size, and Equilibrium error and Heat/Spec error.

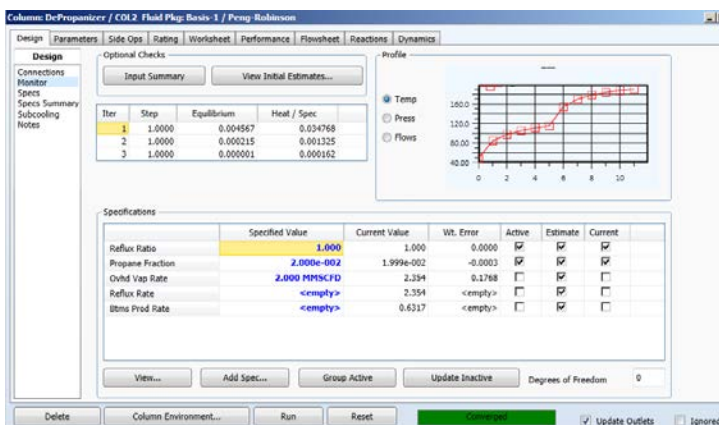

The column temperature profile appears in the Profile group. You can view the pressure or flow profiles.

The status indicator has changed from Unconverged to Converged.

Click the Performance tab, then select the Column Profiles page to access a more detailed stage summary.

Figure 28 - The Column Converges

Tip: Accessing the Column Sub-flowsheet

A column template uses its own flowsheet to represent its internal workings, the flows between the tower, reboiler and condenser, etc. When working with the column, you might want to focus only on the connections in the column sub-flowsheet. You can do this by entering the column environment.

Click the Column Environment button at the bottom of the column property view. HYSYS now displays the Column Sub-flowsheet environment.

When you are finished in the column environment, return to the main flowsheet by clicking the icon in the tool bar or the Parent Environment button on the bottom left of the Column Form.

2.14. Viewing and Analyzing Results

Use the Workbook folder on the navigation pane to open the Workbook for the main case and view the calculated results for all streams and operations.

Click the Streams tab and the Compositions tab.

2.15. Using Data Tables

The HYSYS Data Tables provide a convenient way to examine your flowsheet in more detail. You can use the Data Tables to monitor key variables under a variety of process scenarios, and view the results in a tabular or graphical format.

For this example, we will examine the effects of LTS temperature on the Sales Gas dew point and flow rate, and the Liquid Product flow rate.

2.15.1. Creating the Data Table

1. Click Data Tables in the Simulation environment navigation pane.
2. Click Add in the Data Tables form. A new table is added to the Data Tables folder with the default name ProcData1. Right-click the name to rename the table to KeyVars. Here you will add the key variables.
3. Click *Add* in the new data table. The Variable Navigator opens.

The Variable Navigator is used extensively in HYSYS for locating and selecting variables. It operates in a left-to-right manner. In the Flowsheet column you see two listings: The case or main flowsheet, and in a subfolder, the column sub flowsheet.

4. In the Object Filter group (right side of the form), select UnitOps.
5. In the Object list, select the LTS.

6. In the Variable list, select Vessel Temperature. Click Add to add this variable to the Data Tables.

7. Continue adding variables to the Data Tables:

- In the Object Filter group, select the Streams radio button. Select SalesDP >Temperature.
- In the Variable Description field, change description to Dew Point, then click Add.

Repeat the previous steps to add the following variables to the Data Tables:

- SalesGas stream; Molar Flow variable; change the Description to Sales Gas Production.
- LiquidProd stream; Liq Vol Flow@Std Cond variable; change the Description to Liquid Production.

8. Close the Variable Navigator.

You can access this table again later to demonstrate how its results are updated whenever a flowsheet change is made.

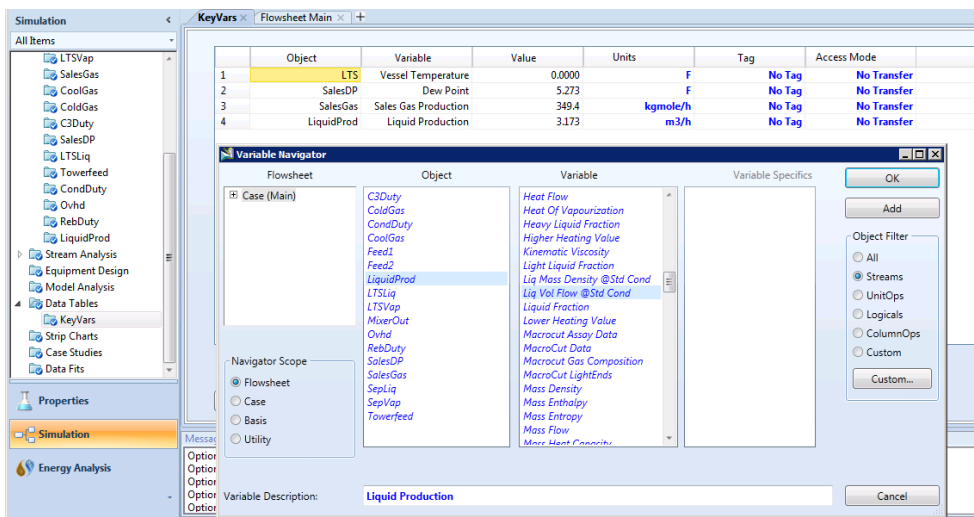


Figure 29 - Use the Variable navigator to set up a data table

2.16. Modify the ColdGas Stream; Observe Results

In this section, you will change the temperature of stream ColdGas (which determines the LTS temperature) and view the resulting changes for calculated values in the process data table.

1. On the Navigation pane, expand the Streams folder, right-click the cursor over Streams > Coldgas and select Open in New Tab. This lets you have tabs open for both the KeyVars table and the ColdGas stream.

- Right-click the Coldgas (Material Stream) tab and click New Vertical Tab Group from the shortcut menu. The Windows are arranged side by side.

Currently, the LTS temperature is 0 degrees F. The key variables will be checked at 10 degrees F.

In the ColdGas Temperature cell, type 10 degrees F. HYSYS automatically recalculates the flowsheet. The new results are shown.

The change in Temperature generates the following results:

- The Sales Gas flow rate has increased from 7.015 MMSCFD to 7.358 MMSCFD.
- The Liquid Product flow rate has decreased from 478.9 barrel/day to 450.6 barrel/day.
- The sales gas dew point has increased from 5.273 to 15.9 degrees F. We can see that this temperature no longer satisfies the dew point specification of 15 degrees F.

Click the Close icon on the ColdGas stream property view and return to the Data Tables.

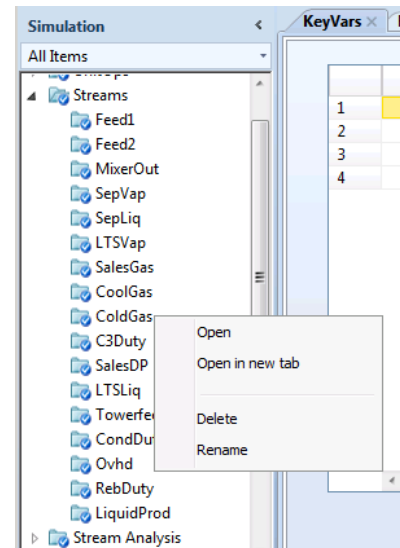


Figure 30 - Click Open in new tab

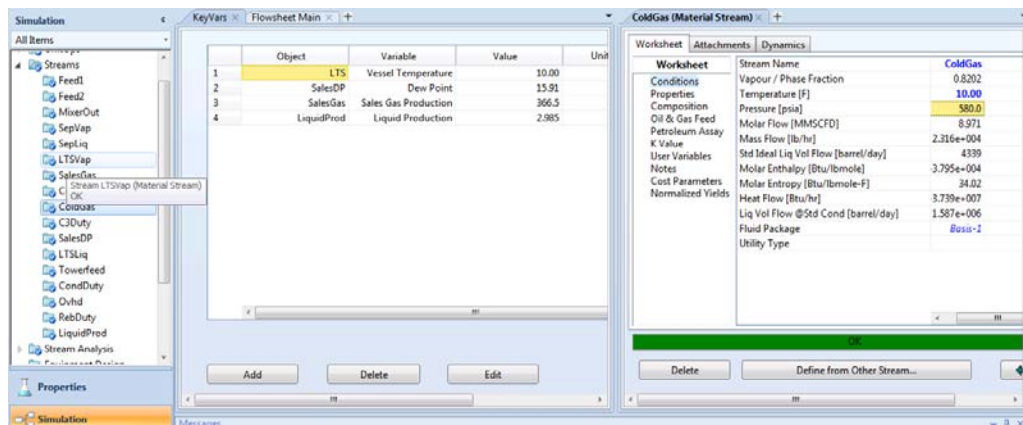


Figure 31 - Compare the Variables at ColdGas temperatures of 0 and 10 degrees F.

2.17. Case Complete

The basic simulation for this example is now completed. You have learned how to use the HYSYS user interface to set up a new simulation file, specify components and methods, place material streams, connect them to unit operations, and use basic utilities to examine simulated data. You should now be able to open and examine more advanced techniques used in the other example cases for specific applications, or to begin building your own simulation case.